



 


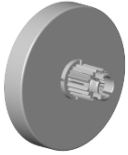










Rosette ohne Logo 50 x 50 x 9,5 mm - Platin gebürstet

ERSATZTEILE

04 27 74 004 00



	Platin gebürstet	04 27 74 004 00-06
	Chrom	04 27 74 004 00-00
	Dark Brass matt	04 27 74 004 00-16
	Dark Bronze matt	04 27 74 004 00-17
	Dark Chrome	04 27 74 004 00-19
	Light Gold	04 27 74 004 00-26
	Light Gold gebürstet	04 27 74 004 00-27
	Messing gebürstet (23kt Gold)	04 27 74 004 00-28
	Schwarz matt	04 27 74 004 00-33
	Dark Brass gebürstet	04 27 74 004 00-39
	Bronze gebürstet	04 27 74 004 00-42
	Champagne gebürstet (22kt Gold)	04 27 74 004 00-46
	Champagne (22kt Gold)	04 27 74 004 00-47
	Chrom gebürstet	04 27 74 004 00-93
	Dark Platin gebürstet	04 27 74 004 00-99



Rosette ohne Logo 50 x 50 x 9,5 mm - Platin gebürstet

ERSATZTEILE

04 27 74 004 00



Rosette ohne Logo 50 x 50 x 9,5 mm - Platin gebürstet

ERSATZTEILE

04 27 74 004 00