

90 20 97 507 00



| | | |
|---|---------------------------------------|--------------------|
|  | Schwarz matt | 90 20 97 507 00-33 |
|  | Chrom | 90 20 97 507 00-00 |
|  | chrom gebürstet (04) | 90 20 97 507 00-04 |
|  | Platin gebürstet | 90 20 97 507 00-06 |
|  | Platin | 90 20 97 507 00-08 |
|  | Weiß matt | 90 20 97 507 00-10 |
|  | Dark Brass matt | 90 20 97 507 00-16 |
|  | Dark Bronze matt | 90 20 97 507 00-17 |
|  | Dark Chrome | 90 20 97 507 00-19 |
|  | Light Gold | 90 20 97 507 00-26 |
|  | Light Gold gebürstet | 90 20 97 507 00-27 |
|  | Messing gebürstet (23kt Gold) | 90 20 97 507 00-28 |
|  | Dark Brass gebürstet | 90 20 97 507 00-39 |
|  | Bronze gebürstet | 90 20 97 507 00-42 |
|  | Champagne gebürstet (22kt Gold) | 90 20 97 507 00-46 |
|  | Champagne (22kt Gold) | 90 20 97 507 00-47 |
|  | Cyprum | 90 20 97 507 00-49 |
|  | Chrom gebürstet | 90 20 97 507 00-93 |
|  | Dark Platinum gebürstet | 90 20 97 507 00-99 |



Bürstengriff - Schwarz matt

ERSATZTEILE

90 20 97 507 00



Bürstengriff - Schwarz matt

ERSATZTEILE

90 20 97 507 00

90 20 97 507 00

Ersatzteile für die
anderen
Oberflächenvarianten
finden Sie hier:
Chrom

